PICK YOUR GAME VARIATION USING THE HAND CONTROLLERS

Look at page 7 and choose your game variation. Now press the #2 key and numbers increase in value on the TV screen. Press the #3 key and the numbers increase at a faster pace. Release the key when the number you want is on the screen, then press the #1 key.

If you overshoot your number, press the #5 key and numbers begin to decrease slowly. Press the #6 key and they decrease faster!

SELECT NUMBER OF ROUNDS USING THE COMPUTER KEYBOARD

Press any number from 1 to 99 on the keyboard. Then press the RETURN KEY on the Keyboard.

SELECT NUMBER OF ROUNDS USING THE HAND CONTROLLERS

Use the #2 & #3 and #5 & #6 keys to display the round number you want, just as you did to choose the game variation, see page 6.

During Trap games, the number of rounds remaining is shown as a white digit in the lower left corner of the screen.

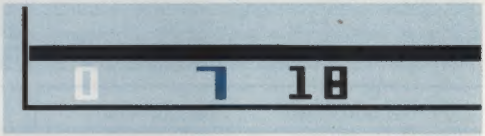

NOTE: Before the game actually starts, you can return to the title frame and start over by pressing the RST Key on the keyboard.